

## Special Zones

Doberman Security & Automation

Version 4.0

© 2000-2004, Golden Crater Software

---

These device names are pre-defined in the Doberman system:

Alert Zone (11):

Alert1:Security Switch	1
Alert1:Motion Sensed	2
Alert1:Security Timer	3
Alert1:Alarm State	4
Alert1:Power-Loss State	5
Alert1:Panic	9
Alert1:Fire	10
Alert1:Temperature	11
Alert1:Water	12

Variable Zone (12):

State:Away	1
State:Vacation	2
State:Event	3
State:Night	4

Alert Zone (11) has programmatic meaning for all 16 zones. These values are automatically set:

Unit	Meaning
1	Security Switch Sensed
2	Motion Sensed
3	Security Timer Active
4	Alarm State
5	Powerloss State
6	Reserved
7	Reserved
8	Reserved
9	Panic State
10	Fire Sensed
11	Temperature Sensed
12	Water Sensed
13	Reserved
14	Reserved
15	Reserved
16	Reserved

For each security zone, from 1 through 16.

Variable Zone (12) has reserved meaning for zone 16, future functionality may interpret these values. However, you are free to use them in your macros:

Unit	Meaning
1	Home(0)/Away(100)
2	None(0)/Vacation(100)
3	None(0)/Event (e.g. Party)
4	Day(0)/Night(100)
5	Reserved
6	Reserved
7	Reserved
8	Reserved
9	Reserved
10	Reserved
11	Reserved
12	Reserved
13	Reserved
14	Reserved
15	Reserved
16	Reserved